




Get perfect on-press matches to Pantone solids from a custom calibrated PerfX Color Recipe

- ✦ You have to simulate or find the closest match to specific Solid colors in CMYK and RGB
- ✦ You need to provide your specific color matching library to customers.

YOU WANT A SOLUTION FOR ALL OF THE ABOVE?

PerfX Color Recipes™ is it!

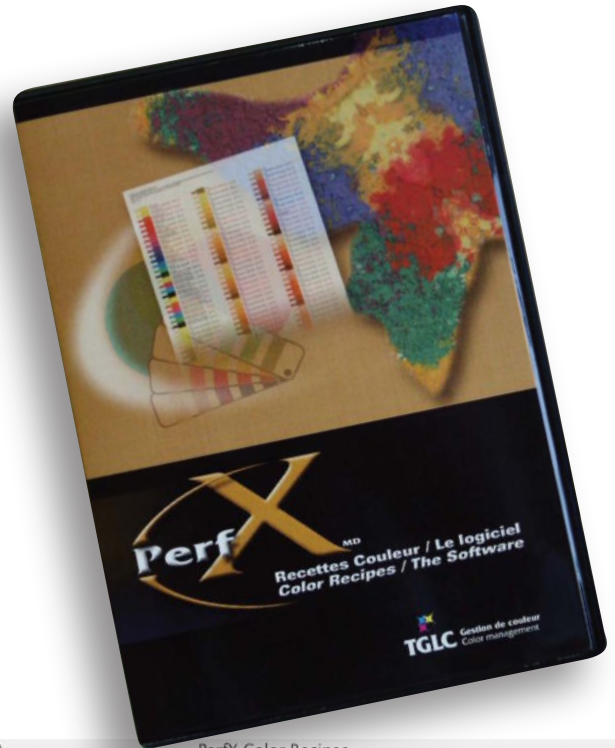

PERFX COLOR RECIPES LIST
TEXTIL SAMPLE TO PRESSE 175L
 Relative Colorimetric Intent
 100% of 6 colors within a tolerance of 2.00 (CIE 2000)
 Page 1 of 1


	SAMPLE 1 C000 M084 Y45 K000 dE=1.61
	SAMPLE 2 C011 M003 Y70 K000 dE=1.52
	SAMPLE 3 C045 M042 Y039 K004 dE=1.69
	SAMPLE 4 C018 M038 Y034 K000 dE=1.27
	SAMPLE 5 C045 M067 Y078 K051 dE=1.95
	SAMPLE 6 C002 M100 Y099 K001 dE=1.00

PERFX COLOR RECIPES LIST
TEXTIL SAMPLE TO INKJET GLOSS
 Relative Colorimetric Intent
 100% of 6 colors within a tolerance of 2.00 (CIE 2000)
 Page 1 of 1

	SAMPLE 1 C000 M081 Y34 K000 dE=1.69
	SAMPLE 2 C008 M002 Y63 K000 dE=1.36
	SAMPLE 3 C041 M035 Y032 K003 dE=1.89
	SAMPLE 4 C014 M031 Y026 K000 dE=1.03
	SAMPLE 5 C050 M067 Y081 K041 dE=1.17
	SAMPLE 6 C000 M100 Y087 K000 dE=1.87

PERFX COLOR RECIPES LIST
TEXTIL SAMPLE TO sRGB
 Relative Colorimetric Intent
 100% of 6 colors within a tolerance of 2.00 (CIE 2000)
 Page 1 of 1

	SAMPLE 1 R209 G083 B104 dE=1.57
	SAMPLE 2 R228 G224 B119 dE=1.79
	SAMPLE 3 R140 G133 B135 dE=1.31
	SAMPLE 4 R195 G161 B153 dE=1.09
	SAMPLE 5 R081 G061 B46 dE=1.89
	SAMPLE 6 R195 G039 B43 dE=1.13

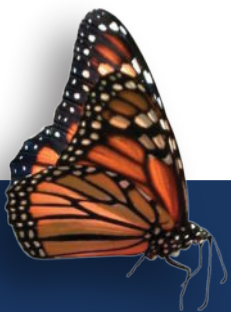

WWW.TGLC.COM

PerfX Color Recipes™

Feature List



Get perfect on-press matches to Pantone solids from a custom calibrated PerfX Color Recipes

General

- Mac OS 9.2 and higher, Mac OS X™ or Windows™ compatible.
- Uses and creates NCP class profiles (Named Color Profiles).

Input options

- Uses CIE Lab color values captured with a spectrophotometer and saved as text file.
- Supports NCP profiles.

Output Options

- Choice of RGB, CMYK or CMYKOG color recipes based on selected ICC profile.
- Choice of rendering intent. (Perceptual, Relative or Absolute Colorimetric and Saturation)
- Custom page layout definition.
- Choice of "delta E" calculation method (CIE Lab, CIE94 and CIE2000).
- Choice of preferred deltaE tolerance value.
- Red highlighted out of tolerance color recipes.
- Option to constrain the minimum color value set for each primary color.
- Option to display CIE Lab colors for "before and after" on-screen comparison.
- Option to embed the ICC output profile in the Color Recipes PDF file.
- Save the Color Recipes book in PDF, Postscript or simple text file formats.

Home made
Color recipes



WWW.TGCLC.COM

PerfX Color Recipes™


Screen captures




The need to get RGB or CMYK color recipes from a color database or solid colors



Main interface

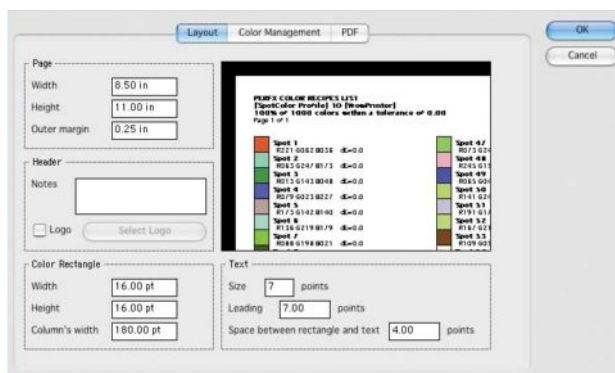

Page layout settings

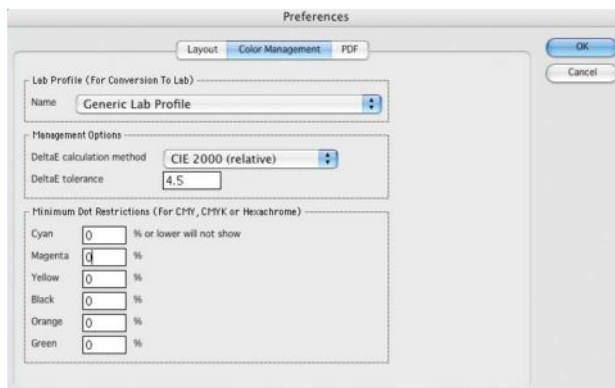

Options and preferences

